

Lucci A\R

PARSEC LARGE DC EXHAUST FAN

SKU# 200083

- INSTALLATION
- OPERATION
- MAINTENANCE
- WARRANTY INFORMATION

CAUTION

READ INSTRUCTIONS CAREFULLY FOR SAFE

INSTALLATION AND FAN OPERATION.

PARSEC Exhaust Fan Installation Instructions



To ensure correct function and safety, please read and follow all instructions carefully before assembly, installation and use of this exhaust fan. Please keep instructions for future reference.

WARRANTY

- This exhaust fan is covered by a 3 year warranty. The warranty is from date of purchase, not the date of installation.
- Please retain proof of purchase for any warranty enquires.
- Warranty will be void if there is any damage due to improper usage or modification to the exhaust fan.
- Failure to comply with instructions in this manual may increase the risk of damage or injury and will void warranty.

SAFETY PRECAUTIONS

- Always ensure the power is OFF and the exhaust fan has cooled down before performing any maintenance, cleaning
 or making any adjustment to the exhaust fan.
- Ensure that the exhaust fan is switched off from the supply mains before removing the fascia.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Do not allow any foreign object to enter the grille opening as which may damage the product.
- If the supply cord is damaged, it must be replaced by the manufacturer, it's service agent or similarly qualified persons to avoid any potential hazard.

INSTALLATION REQUIREMENTS

- Before installation, check the installation location in the ceiling has access to a socket outlet which is connected to a wall switch. If it does not, please contact a licensed electrician to arrange installation of the socket outlet and wall switch before continuing. Refer to the circuit diagram section for more information. (Fig.3)
- All wiring and installation of the exhaust fan must adhere to the local council regulation and latest local and national wiring rules, eg. AS/NZS 3000 electrical installations. If unsure, contact a licensed electrician.
- This is a Class I product and must be earthed.
- This product is suitable for indoor use only.
- This product is to be installed so that the blades are more than 2.1 m above the floor.
- Before cutting a hole in the ceiling, check that there are no ceiling joists, etc. or electrical wiring above the desired mounting location.
- The mounting point must be able to support at least 2 times the weight of the exhaust fan.
- Ensure all the clearance values to structural building elements are maintained according to the clearance diagram in Fig. 2.
- Do not install the exhaust fan in canopies over stoves etc., as excessive heat will damage the product.
- This product is designed for installation in the flat ceiling only. Do not mount it on a sloping ceiling or a vertical wall.
- Any duct (not included) attached to the product must be installed horizontally in the ceiling and with the same height or lower than the exhaust fan.
- Ensure the duct (not included) is not bent otherwise the performance will be reduced.
- Where applicable, precautions must be taken to avoid the back-flow of gases into the room from the open flue of gas or other fuel-burning appliances.



- Do not allow any thermal insulation to cover any part of the rear of the appliance.
- Ensure the thermal insulation does not obstruct the airflow.
- There must be an adequate source of external air to ensure the rated performance. For exhaust fan optimum performance, volume of air being extracted should be equal to the amount of air entering the room. Air is drawn mostly from under a door, or an open window. If the bathroom or room is air-tight (door and windows shut), the exhaust will not perform well.

PARTS LIST

Unpack your fan carefully. Remove all parts and hardware.

NOTE: Take care not to pull any electrical wires during unpacking as this may damage the connection.

- Lay out all the components on a smooth surface and make sure there are no components missing before assembling.
 If parts are missing, return the complete product to the place of purchase for inspection or replacement.
- Check whether the exhaust fan has been damaged during transport. Do not operate/install any product which
 appears damaged in any way. Return the complete product to the place of purchase for inspection, repair or
 replacement.
- Examine all parts, which should include the following (Fig.1):
 - 1 Fan motor assembly x 1
 - 2 Fascia x 1
 - 3 Small Outlet nozzle (100mm) x 1
 - 4 Large Outlet nozzle (150mm) x 1

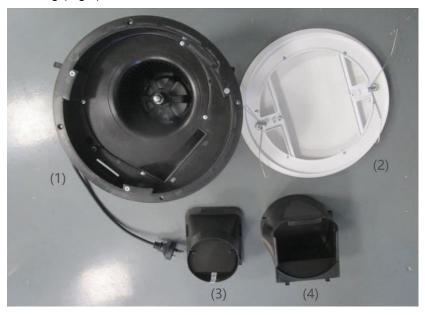


Fig. 1


 Complete your exhaust fan installation by purchasing from our range of compatible Lucci Air flexible aluminium ducting and ducting accessories, which are sold separately:

Chosen	Flexible Alum	Ducting Clamps &	External Vent Covers	
Ducting Size	Ducting (3m)	Aluminium Tape		
100mm	SKU# 209100	Clamp: SKU# 209112, Tape: SKU# 209114	Stainless Steel Vent with Mesh: SKU# 209103,	
			Plastic Vent with Mesh: SKU# 209109,	
			Louvred Plastic Wall Vent with Mesh: SKU# 209117	
150mm	SKU# 209102	Clamp: SKU# 209113, Tape: SKU# 209114	Stainless Steel Vent with Mesh: SKU# 209106,	
			Plastic Vent with Mesh: SKU# 209111,	
			Louvred Plastic Wall Vent with Mesh: SKU# 209118	



CLEARANCE REQUIREMENTS

Before installation, please plan and check the ceiling space to make sure that there are no obstructions such as ceiling joists and there is sufficient height clearance for the motor housing. Refer to the below Figure 2 for the clearance requirements.

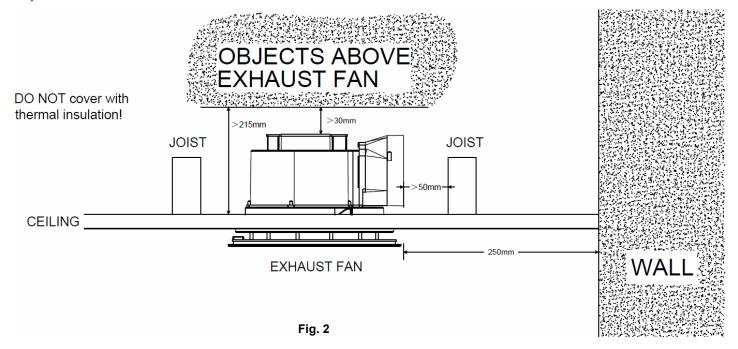

INSTALLATION INSTRUCTIONS

NOTE: Before installation, it is recommended to test the exhaust fan by plugging into an available socket outlet prior to installation to ensure the product is working correctly.

Switch off the mains power before commencing the below installation.

INSTALLATION METHOD 1: Attaching ducting to the exhaust fan from within the ceiling cavity

1. Using the 300mm Cut-out Template, mark and cut an installation hole into the ceiling (Picture A)

NOTE: Ensure clearance requirements listed in Fig. 2 above are met prior to cutting into the ceiling.

2. Install the appropriately sized ducting (not included, sold separately) and external vent (not included, sold separately) that is best suited for your installation setup.

NOTE: For optimum performance, the 150mm sized ducting is highly recommended.


- 3. Attach the Small (100mm) or Large (150mm) outlet nozzle onto your ducting (not included) based on the ducting size being used, and place within the ceiling cavity near the cut-out hole. (Picture B)
- 4. Plug the exhaust fan power lead into an available socket within the ceiling cavity, and then fit the exhaust fan through the cut-out and into the ceiling.
- 5. Using a screwdriver, adjust the three mounting clips outwards and then tighten the screws until the mounting clips are clamped down to the ceiling tightly. (Picture C) If required, additional screws can be used to aid in holding the unit in the ceiling. Screw holes are provided in the flange for this purpose.
- 6. From within the ceiling cavity, slide the chosen outlet nozzle onto the exhaust fan body until it clicks into place.

 (Picture D) Ensure the ducting outlet nozzle has been properly fitted by checking the fastenings from underneath the exhaust fan (Picture E)



7. Install the fascia onto the exhaust fan body by fitting the spring clips into the slots withing the fan body. (Picture F) Switch on the power and test the exhaust fan is functioning properly.

INSTALLATION DIAGRAM: Attaching ducting to the exhaust fan from within the ceiling cavity

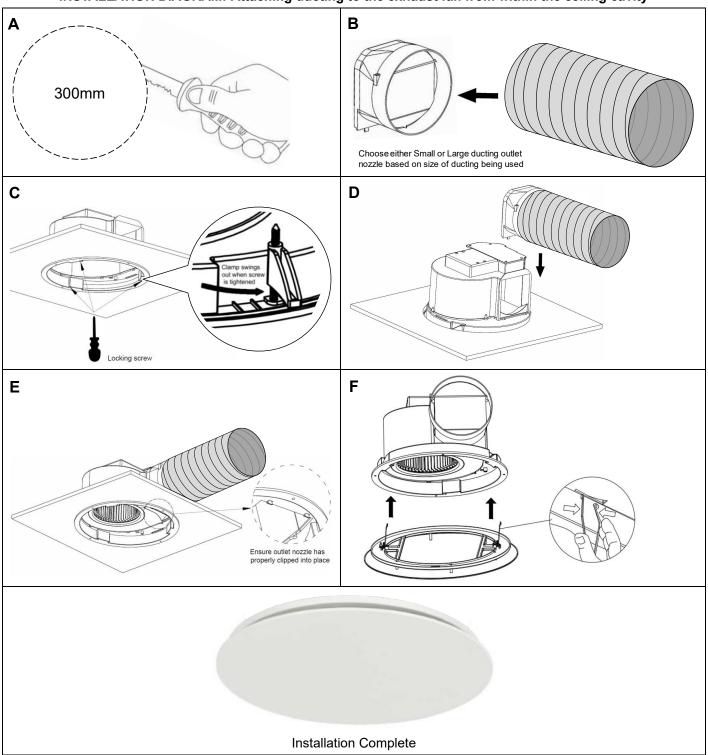



INSTALLATION METHOD 2: Attaching ducting to the exhaust fan prior to installing into the ceiling

1. Using the 300mm Cut-out Template, mark and cut an installation hole into the ceiling (Picture A)


NOTE: Ensure clearance requirements listed in Fig. 2 above are met prior to cutting into the ceiling.

Install the appropriately sized ducting (not included, sold separately) and external vent (not included, sold separately) that is best suited for your installation setup.


NOTE: For optimum performance, the 150mm sized ducting is highly recommended.

- 3. Attach the Small (100mm) or Large (150mm) outlet nozzle onto your ducting (not included) based on the ducting size being used, and feed through the cut-out hole from the ceiling cavity. (Picture B)
- 4. Slide the chosen outlet nozzle onto the exhaust fan body until it clicks into place. (Picture C) Ensure the ducting outlet nozzle has been properly fitted by checking the fastenings from underneath the exhaust fan. (Picture D)
- 5. Plug the exhaust fan power lead into an available socket within the ceiling cavity, and then fit the exhaust fan and ducting through the cut-out and into the ceiling. (Picture E) Ensure Ducting doesn't become compressed or twisted when fitting the exhaust fan into the ceiling.
- 6. Using a screwdriver, adjust the three mounting clips outwards and then tighten the screws until the mounting clips are clamped down to the ceiling tightly. (Picture F) If required, additional screws can be used to aid in holding the unit in the ceiling. Screw holes are provided in the flange for this purpose.
- 7. Install the fascia onto the exhaust fan body by fitting the spring clips into the slots within the fan body. (Picture G)
- 8. Switch on the power and test the exhaust fan is functioning properly.

INSTALLATION DIAGRAM: Attaching ducting to the exhaust fan prior to installing into the ceiling

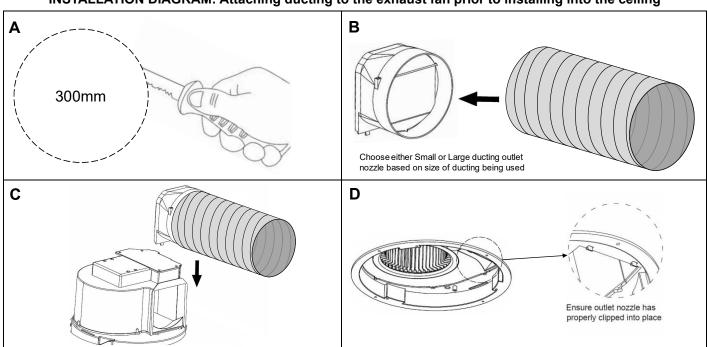




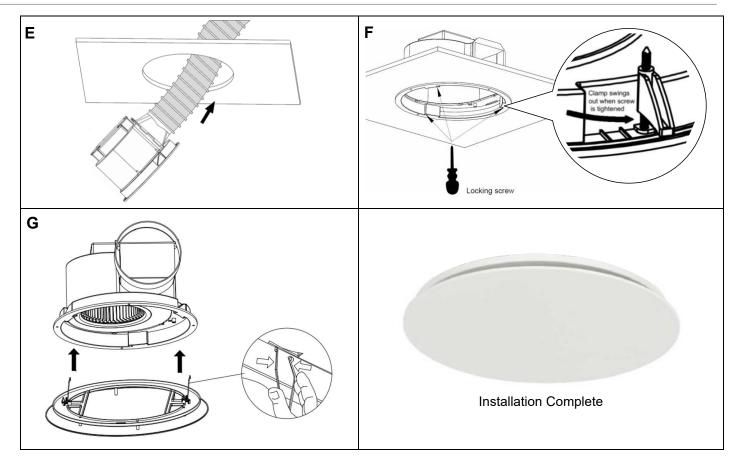

CIRCUIT DIAGRAM

NOTE: The appliance is provided with flex cord and plug. Check the installation location in the ceiling has access to a socket outlet which is connected to a wall switch. If it does not, please contact a licensed electrician to arrange installation of the socket outlet and wall switch.

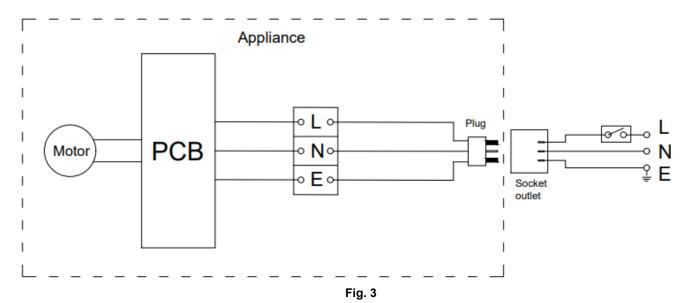



CARE & CLEANING

NOTE: Always turn OFF the power at the mains switch before performing any maintenance or attempting to clean your fan.

- Clean the fascia and blades regularly. To clean, wipe with a damp clean cloth with NO organic solvents or cleaners.
- Do not soak or immerse your fan in the water or other liquids. It could damage the product and create the possibility of an electrical shock.

Specifications					
SKU#	200083				
Colour	White				
Insulation class	Class I				
IP rating	IP24 after installation (underneath ceiling only)				
Rated voltage	220-240V~, 50Hz				
Fan Rated wattage	40W				
Max. Airflow	600M ³ /H				
Cut-out size	Ф300mm				
Overall dimensions	Dia: Ф365mm H:209mm				
Size of faceplate	Round (Φ365mm)				
Exhaust outlet / Duct size	Φ100mm or Φ150mm with interchangeable ducting outlet nozzles				
Blade diameter	Ф164mm				
Weight	1.95kg				



Lucci

BATHROOM EXHAUST FAN WARRANTY CARD

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Every Lucci Air Exhaust fan is thoroughly inspected and tested before being released for sale. In addition to any warranties or conditions implied by applicable Statue or Regulation, Lucci Design warrants all of it's bathroom heaters against defective workmanship and faulty materials for thirty six (36) months from the original date of purchase. Lucci Design undertakes, at it's option, to repair or replace, free of charge, each product or part thereof subject to the below warranty conditions;

- 1) The fan or relevant part has not been modified, subjected to misuse, neglect, or been involved in an accident.
- 2) The repairs are not required as a result of normal wear and tear.
- 3) The product was installed by a licenced electrical contractor in accordance with this instruction manual.
- 4) No solid state speed control device has been used with the appliance.
- 5) A copy of the original receipt of purchase is presented.
- 6) Globes supplied are not covered by this warranty

Lucci Design cannot be held responsible for any repair other than those carried out by it or one of it's Authorised Service Agents. Please keep this warranty form in a safe place. This form must be produced in the event of service being required.

IN THE EVENT OF SERVICE BEING REQUIRED, PLEASE CALL THE LUCCI FAN WARRANTY HOTLINE ON 1800 602 243 BETWEEN 9AM & 5PM (E.S.T) MONDAY TO FRIDAY ENSURING THAT YOU

HAVE THE FOLLOWING DETAILS ON HAND:

MODEL (SKU) NUMBER:		
DATE OF PURCHASE:		
RETAILER:		
RECEIPT NUMBER:		
INSTALLED BY:		
LICENCE # :	PH:	
DESCRIPTION OF FAULT:		