

LUCCI POWER DRYER

- **SAFETY PRECAUTION**
- **OPERATION**
- **MAINTENANCE**
- **WARRANTY INFORMATION**

CAUTION
READ INSTRUCTIONS CAREFULLY
FOR SAFE OPERATION.

THANK YOU FOR PURCHASING

This dryer is ideal for drying wet, damp and flooded surfaces such as carpets, finished floors, painted areas and more.


To ensure correct function and safety, please read and follow all instructions carefully before use of this dryer. Please keep this manual for future reference.

IMPORTANT SAFETY PRECAUTIONS

1. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
2. Children should be supervised to ensure that they do not play with the appliance.
3. To avoid a hazard due to instability of the appliance, it must be placed on an even flat surface.
4. Do not operate this appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.
5. If the supply cord is damaged, it must be replaced by the manufacturer or a qualified electrician in order to avoid a hazard.
6. Before each use, check for any damaged parts, and replace or repair accordingly before any further operation.
7. Connect to properly grounded power outlet only. No other appliance should be plugged into the same outlet. Be sure that the plug is fully inserted into the mains power outlet.
8. Do not run the power cord over carpeting or other heat insulators. Do not cover the cord. Keep cord away from traffic areas, and do not submerge in water.
9. Switch off and unplug the appliance before cleaning or making any repairs or servicing.
10. Keep safety guards/grills in place and don't operate the machine with them removed.
11. Always keep your hand clear of the rotating blades, never put your hands or any other object inside the guard/grill when the machine is switched on.
12. Do not wear jewellery or loose clothing that could be caught by the rotating blades.
13. Exercise caution and use reasonable supervision when appliance is used near children to ensure that they do not play with the appliance.
14. Do not operate this appliance whilst under the influence of drugs, alcohol or any medication.
15. Keep the area around the fan clear and a suitable distance from objects that may be suctioned into the fan.
16. This appliance is for commercial and household use.
17. This appliance is suitable for indoor use only.


PARTS IDENTIFICATION

- Unpack your Dryer carefully from carton. check that all parts are attached, and nothing is damaged or broken during transport. Do not operate any product which appears damaged in any way. Return the complete product to the place of purchase for inspection, repair or replacement.

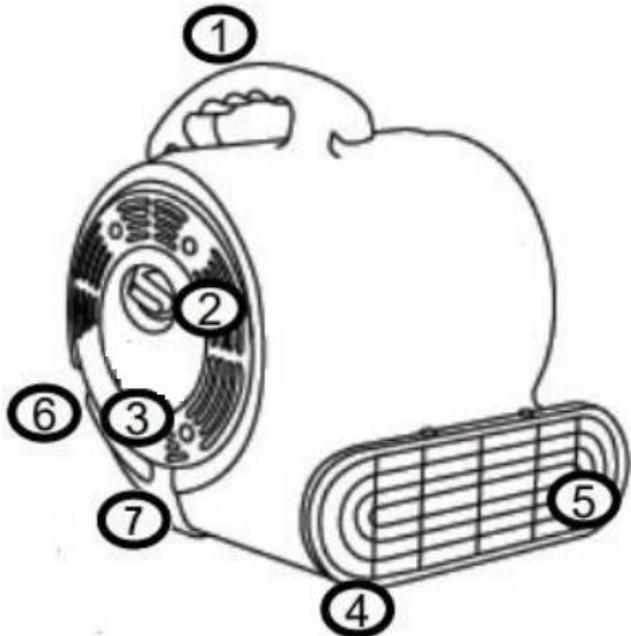

- ① **Cord Wrap / Carrying Handle**
- ② **3 Speed Fan Control**
- ③ **Air Inlet**
- ④ **Kickstand and Rubber Feet**
- ⑤ **Air Outlet**
- ⑥ **Power Cord (Not show)**
- ⑦ **Circuit Break Reset**

DIRECTING THE AIRFLOW

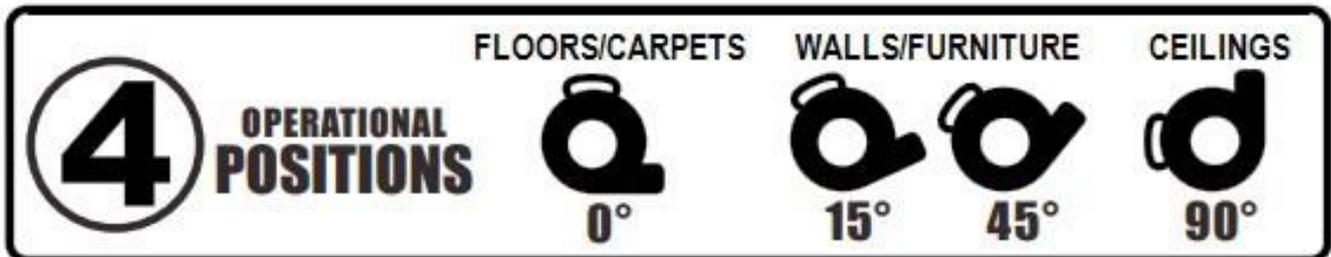

OPERATION

WARNING: To reduce the risk of electric shock, do not expose to rain or water.
This appliance is suitable for indoor use only.

WARNING: This appliance must be earthed.

1. Place the Dryer in desired position. Ensure it is on a stable, flat and dry surface.
2. Plug the power cable into a suitable power outlet and switch on the power outlet.
3. Using the Speed controls on turn Dryer on to desired speed.
4. On completion, turn off the Dryer using the same speed controls. also turn off power at power outlet and wrap cord around handle ready for storage.
5. Ensure the Dryer has cooled down prior to repacking after use.

CARE & CLEANING

NOTE: Always turn OFF the power at the mains switch before performing any maintenance or attempting to clean your Dryer.

- Before each use check the fan and cable for damage.
- To clean the fan, switch off and unplug from power outlet. The housing and grill should be cleaned using mild detergent and a damp soft cloth. ensure no water goes into the motor.
- Do not use harsh detergents, chemical cleaners or solvents as this will damage the finish.
- When no longer using the Dryer, please repack into carton and store in a dry place out of the sun.

TECHNICAL INFORMATION

Product Description	LUCCI POWER DRYER
Model	SKU# 216128
Rated Voltage	220-240V~ 50Hz
Rated Wattage	170W
Airflow	19.6m ³ /Min
Operational Positions	4 => 0°, 15°, 45°, 90°
Weight	4.6kg
Dimensions	W:270mm E:310mm H:330mm