

TANIMI HORIZON 600MM WALL BRACKET

SKU# 237129, 237130, 237131 Rated Voltage 220-240V~ 50Hz

To ensure correct function and safety, please read and follow all instructions carefully before assembly, installation and use of this luminaire. Please keep instructions for future reference.

Warranty

- Thisluminaire is covered by a 5 year warranty. The warranty is from date of purchase, not the date of installation.
- If the luminaire is not assembled and installed by a licensed electrician the warranty will be void.
- Please retain proof of purchase and evidence of installation by a licensed electrician for any warranty enquiries.
- The use of non-compatible dimmers may damage your luminaire and will void your warranty.
- Warranty will be void if there is any damage due to improper usage or modification to the luminaire.
- Failure to comply with the instructions in this manual may increase the risk of damage or injury and will void the warranty.

Installation Requirements

- This luminaire must be assembled and installed by a licensed electrician.
- All wiring and installation of the luminaire must adhere to the latest local and national wiring rules.
 eg. AS/NZS 3000 Electrical installations.
- Select a suitable location for installation:
 - This luminaire is protected against water penetration to IP65 standards, which is against low-pressure jets of water from all practicable directions. This must be maintained during wiring and installation.
 - The luminaire must not be used if the protective shield has cracked. Replace the protective shield before using the luminaire.
 - The mounting point must be able to support 2 times the weight of the luminaire.
- The colour shifting function is designed to operate with a mechanical or relay ON/OFF switch, as well as selected semi-conductor ON/OFF switches, such as MFL Artisan or Lucci Power Dimmers with ON/OFF functionality. Please note the colour shifting function may not operate correctly on all semi-conductor switches.
- This luminaire is dimmable and the use of an LED dimmer is strongly recommended. Please see Highly
 Recommended Dimmers Section of the Specifications on Page 5 for a list of SKUs that have been specifically
 designed & tested for use with this luminaire.

NOTE: Dimming may cause buzzing sounds or a slight flicker. There may be slight delays with the LED light start up or slight uneven light performance when more than one LED light fitting is linked together, switched ON or dimmed. This is not a product fault and as such is not covered under warranty.

NOTE: Some dimmers have a minimum load of 20W. Ensure the dimmer position is on the maximum setting before turning on the LED light and adjust the dimmer down to your desired light level.

NOTE: Testing cannot account for installation variables such as variation in mains supply voltage, cable capacitance, electrical noise, transients, surges and ripple control signals (commonly found in NSW & QLD).

- NOTE: The information provided is correct to the best of Beacon Lighting's knowledge at the date of publication.
- Take care not to pull any electrical wires during unpacking as this may damage the connection.
- Lay out all the components on a smooth surface and make sure there are no components missing before assembling. If parts are missing, return the complete product to the place of purchase for inspection or replacement.
- Check whether the luminaire has been damaged during transport. Do not operate/install any product which appears damaged in any way. Return the complete product to the place of purchase for inspection, repair or replacement.
- Ensure power to the circuit you are working on has been switched OFF before commencing any electrical work.

Installation Instructions



Installation Directions

- Remove all packaging material from the product andbe careful not to throw away accessories that maybe hidden within the packaging material. If assembly is required, place the luminaire on a smooth non-scratch surface.
- 2. Remove the mounting bracket (B) from the luminaire(I) by loosening the screws(H).
- 3. Use the mounting bracket(B) as a template to mark the screw positions on the wall.
- 4. Install the mounting bracket (B)onto the wall by using appropriately sized mounting screws (C)and anchors(A).

 Ensure the screws(C) and anchors(A)used are suitable for the mounting surface and the surrounding environment.
- 5. Remove the terminal grommet (F) from the LED driver box (G) by loosening the screws (E)
- 6. Connect the mains supply wire to the terminal block(D) from the LED Driver.

Mains Supply Wire

Luminaire Wire / Terminal Block

Neutral – Blue

Blue or N

Live – Brown

Brown or L

Ensure the wires are secure and no bare wires are exposed.

NOTE: The terminal grommet is suitable for H05V-K type power cord, if the main supply wire from the wall is different, a non-corrosive bead of silicone MUST be applied before installation onto the wall ensuring that no water can run down into the cabling.


- 7. Re-install the terminal grommet (F) back onto the LED driver box (G) by tightening the screws(E).
- 8. Install the luminaire (I)onto themounting bracket(B) and secure by tightening the screws (H).
- 9. After the installation, switch on the luminaire to test and enjoy your new lighting product.
- 10. To operate the colour shifting function, use the wall switch.
 - a. While the luminaire is on, toggle the wall switch OFF and ON again within 3 seconds.

The colour shifting sequence will jump from $3000K \rightarrow 5000K \rightarrow 4000K$.

- b. For the colour shifting to memorise the colour temperature, leave the wall switch OFF for over 7 seconds.
- c. To reset the colour shifting, toggle the wall switch OFF and ON twice within 1 second.

NOTE: If using an MFL Artisan or Lucci Power Dimmer, please see the Dimmer Installation Manual for instructions on how to operate the colour shifting functions correctly.



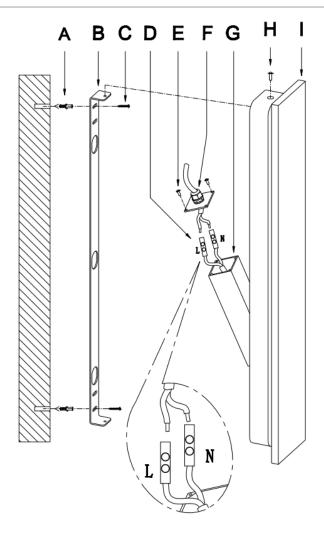

Troubleshooting				
PROBLEM	POSSIBLE CAUSE	SUGGESTED SOLUTION		
Does not work. (New installation)	Loose wiring or no power to the luminaire.	Check your circuit breaker/safety switch box and turn on the power to your circuit. Contact the installing licensed electrician to check if the luminairehas been installed correctly.		
Does not work. (Existing installation)	No power to the luminaire.	Check your circuit breaker/safety switch box and turn on the power to your circuit. Contact your nearest Beacon Lighting store.		
	Non-recommended dimmer used.	Check the dimmer used. Ensure the dimmer used is on the list of recommended dimmers in this manual.		
Flickers when dimming. (New installation)	Some dimmers have a variable loading adjustment function This may not have been adjusted during the installation of the dimmer.	The variable resistor needs to be adjusted to suit the luminaireload to reduce the flickering.		
Flickers when dimming. (Existing installation)	Dimmer position on low.	Ensure the dimmer position is on the maximum setting before turning on the luminaireand adjust the dimmer down to your desired light level.		
Buzzing sound.	Non-recommended dimmer used.	Check the dimmer used. Ensure the dimmer used is on the list of recommended dimmers in this manual.		
Uneven light on start-up	Dimmer position on low when switched on.	Ensure the dimmer position is on the maximum setting before turning on the luminaireand adjust the dimmer down to your desired light level.		

3|Page v1.0 (06/2023)

Installation Instructions



Safety Tips

- Always ensure the power is OFF and the luminaire has cooled down before performing any maintenance, cleaning, or making any adjustment to the luminaire.
- To avoid injury or damage to the luminaire, ensure that power leads and screws are secure before connecting the power.
- The light source of this luminaire is not replaceable; when the light source reaches its end of life the whole luminaire shall be replaced. There are no serviceable parts, do not attempt to dismantle or open the luminaire
- The luminaire must not be used if the protective shield has cracked or damaged.
- Ensure that the luminaire does not come in contact with corrosive chemicals/solvents or abrasive cleaners etc.
- To clean, wipe with a damp clean cloth. Do NOT soak or immerse the luminaire in water or other liquids.

Specifications					
SKU#	237129	237130	237131		
Colour	Black	Natural	Concrete		
Rated Voltage		220-240V~ 50Hz			
Rated Wattage	15W				
LED Specs	Dimmable, Colour Shifting LEDs*, CRI ≥ 90				
	3000K - 500 lumens				
Rated Lumens	4000K - 600 lumens				
	5000K - 650 lumens				
Highly Recommended	Lucci Power SKU# 290989, 290992, 290993, 290994. MFL Artisan SKU# 197015, 197016, 197017, 197018. Lucci Connect SKU# 299043.				
Dimmers	Buster + Punch DIM-002				
	Lucci LEDIux SKU# 290997.				
Compatible	Cli	Clipsal 31E2PUDM, 31E2RUDM, 32E450UDM.			
Dimmers	DIGINET LED Smart MEDM.				
	HPM Cat. 400T.				
Weight		3.3kg			
IP Rating		IP65			
Dimensions		L:600mm W:100mm H:57mm			

^{*}The colour shifting function is designed to operate with a mechanical or relay ON/OFF switch, as well as selected semi-conductor ON/OFF switches, such as MFL Artisan or Lucci Power Dimmers with ON/OFF functionality outlined above. Please note the colour shifting function may not operate correctly on all semi-conductor switches.

4|Page v1.0 (06/2023)