

## TEMPO LED TABLE LAMP WITH BLUETOOTH SPEAKER

SKU# 259120

Rated Voltage 5V DC

Thank you for purchasing this quality Lucci product. To ensure correct function and safety, please read and follow all instructions carefully before assembly, installation and use of the product. Please keep the instructions for future reference.

### Warranty

- This product is covered by a 3 year warranty. Please retain proof of purchase.
- Warranty will be void if there is any damage due to improper usage or modification to the product.
- Failure to comply with the instructions in this manual may increase the risk of damage or injury and will void warranty.

### Installation requirements

- Select a suitable location for the fitting:
  - Ensure it is on a flat and stable surface.
  - This product is suitable for indoor use only.
  - Do not place flammable material near or over the fitting.
  - Ensure the fitting is not installed next to any air vents and is not in any moist or damp areas.
- Only use the supplied power adaptor to charge this fitting.
- Take care not to pull any electrical wires during unpacking as this may damage the connection.
- Lay out all the components on a smooth surface and make sure there are no components missing before assembling.

If parts are missing, return the complete product to the place of purchase for inspection or replacement.

- Check whether the fitting has been damaged during transport. Do not operate/install any product which appears damaged in any way. Return the complete product to the place of purchase for inspection, repair or replacement.
- Do not plug into the mains power socket outlet before or during assembly. Only do so after the portable lamp is fully assembled and ready to use for the first time.

### Installation directions

#### Operation of the portable lamp:

1. Turn on the power switch.
2. Press \* to turn the light on.
3. Press and hold \* to adjust the brightness.
4. Adjust the lamp head to your preferred lighting angle.
5. Press \* again to turn the light off.

#### Operation of the Bluetooth speaker:

1. Turn on the power switch.
2. Press and hold ▶ until the status indicator flash. There will be a prompt tone to indicate the Bluetooth mode is turned on.
3. Turn on the Bluetooth device in your phone/tablet and search for devices in the Bluetooth menu.
4. When 'Tempo range' appears in the Bluetooth device list, select the 'Tempo range' to pair and connect. (If your phone request a pairing code, please enter 0000).
5. After successful pairing, there will be a prompt tone and the status indicator will flash.
6. During music play back:


- Short press **+** for next track; Short press **-** for previous track.
  - Long press **+** for volume up; Long press **-** for volume down.
7. Press and hold **▶||** for 2 second to disconnect the current Bluetooth connection. The status indicator will flash and re-enter the pairing status.

**Audio input:**

1. Press and hold **▶||** until the status indicator flash.
2. Connect the Aux cable to the Aux line-in jack, then connect the other end of the Aux cable to your audio devices.

**Charging & Battery:**

1. Recharge the device when there is a prompt tone indicated that the battery is low.
2. Turn off the power switch before you charge.
3. Connect the provided power adaptor to the DC 5V input port to charge the built-in lithium battery. The charging indicator will be red when under charging.
4. The charging indicator will be green when the lithium battery is fully charged.

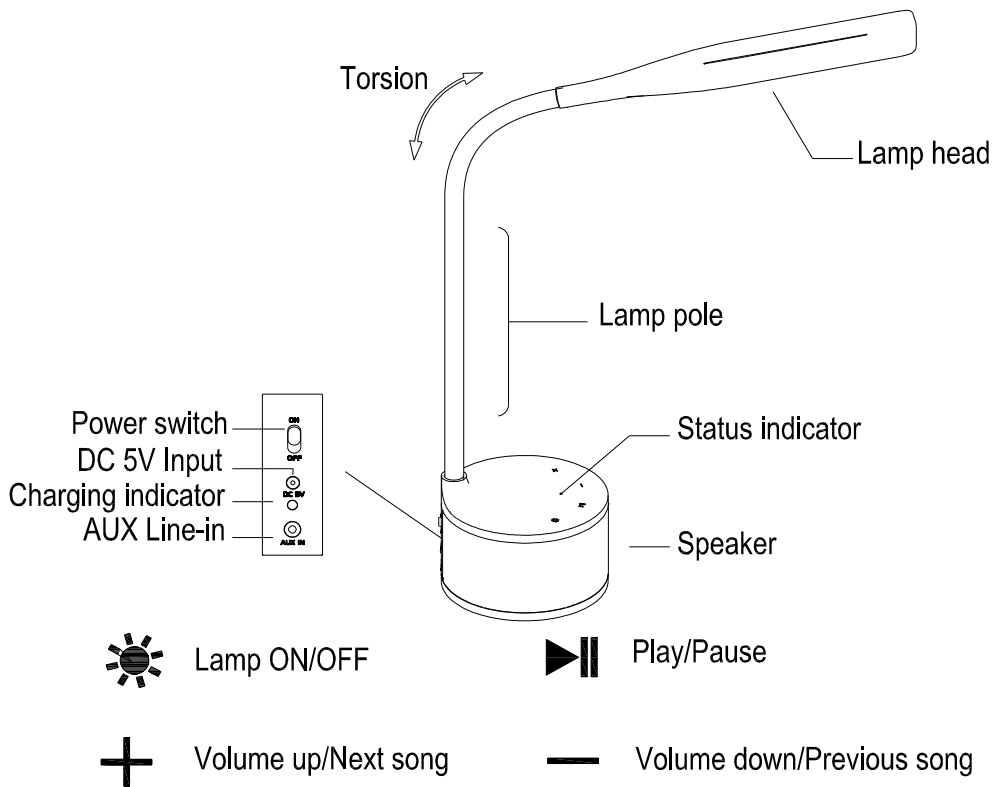

Status	Indicator
Bluetooth on	Blue status indicator flash rapidly
Bluetooth off	Status indicator off
Bluetooth pairing successfully	Blue status indicator flash slowly
Aux cable inserted to the Aux line-in jack	Blue status indicator on. No flash.

## Troubleshooting

Problem	Possible cause and solution
Fail to pair the Bluetooth device	Low battery, please recharge
	Ensure the Aux line-in jack is not connected
	Move the Bluetooth device closer to the speaker or change the location of audio devices
	Turn off the power switch & restart
	Re-connect
	Make sure the speaker connects with one device only
Music interrupted during playback	Low battery, please recharge
	Move the Bluetooth device closer to the speaker or change the location of audio devices
Low battery prompt sound	Lower battery, please recharge
Light flashes	Lower battery, please recharge
Bluetooth connection & light automatically turn off	Battery is exhausted, please recharge

## Safety tips

- Always ensure the power is OFF and the fitting has cooled down before performing any maintenance, cleaning or adjustment to the fitting.
- To avoid injury or damage to the fitting, ensure that power lead is secure before connecting the power.
- Young children should be supervised to ensure that they do not play with the portable lamp.
- This portable lamp has a built-in lithium battery, keep away from fire and high temperature environments.
- Handle the fitting and/or shade with care to avoid any damage or breakage.
- Select a suitable location away from liquids and hazards.
- Ensure that the fitting does not come in contact with corrosive chemicals/solvents or abrasive cleaners etc.
- To clean, wipe with a damp clean cloth. Never soak the fitting with water.

## Specifications

SKU #	259120
Model #	HSD9036B
Colour	Black
Rated Voltage	5V DC
Rated Wattage	Max.6W (3.5W lamp only)
LED Specs	Max.210 Lumens (Dimmable)
Speaker Specs	4Ω, 2.5W, 100Hz – 20kHz
Bluetooth	V2.1 + EDR
Auxiliary input	3.55mm jack
Battery	3.7V, 2000mAh
Weight	0.7kg
Dimensions	H:360mm W:104mm L:380mm Max.