

## MORGAN 1 LIGHT TABLE LAMP

SKU# 280016, 280017

Rated Voltage 220-240V~ 50Hz

To ensure correct function and safety, please read and follow all instructions carefully before assembly, installation and use of this luminaire. Please keep instructions for future reference.

### Warranty

- This portable luminaire is covered by a 12-month warranty valid for in-store replacement or refund only.
- The warranty period starts from the date of purchase. Please retain the proof of purchase.
- Warranty will be void if there is any damage due to improper usage or modification to the portable luminaire.
- Failure to comply with the instructions in this manual may increase the risk of damage or injury and will void the warranty.

### Installation Requirements

- Select a suitable location for the portable luminaire:
  - Ensure it is on a flat and stable surface.
  - This portable luminaire is suitable for indoor use only.
  - Do not place flammable material near or over the portable luminaire.
  - Ensure the portable luminaire is not installed in direct line of an air vent/system.
  - If the portable luminaire is placed in an area prone to moisture, ensure that the area is well ventilated, and an appropriately rated exhaust fan is used if required. Damage or corrosion caused by moisture is not a product fault, and as such is not covered under warranty.
- Do not exceed the maximum wattage rating.
- Refer to the list of recommended LED lamps in the specifications table on page 4.
- Take care not to pull any electrical wires during unpacking as this may damage the connection.
- Lay out all the components on a smooth surface and make sure no components are missing before assembling. If parts are missing, return the complete product to the place of purchase for inspection or replacement.
- Check whether the luminaire has been damaged during transport. Do not operate/install any product which appears damaged in any way. Return the complete product to the place of purchase for inspection, repair or replacement.
- Do not plug into the mains power socket outlet before or during assembly. Only do so after the portable luminaire is fully assembled and is ready to use for the first time.

## Installation Directions

1. Remove all packaging material from the portable luminaire.
2. Remove the lamp holder ring (B) from the lamp holder (D).
3. Install the shade (C) onto the lamp holder (D) and secure with the lamp holder ring (B).
4. Install a globe (A - not included) into the lamp holder (D). Do not exceed the maximum wattage rating.

**NOTE: The touch switch mechanism (H) on this portable luminaire is not compatible with all LED lamps.**

**The use of some LED lamps may result in flickering issues or audible buzzing.**

**See the 'Recommended LED Lamps' section of the specifications table on Page 4 for globe options that have been tested and confirmed to be compatible with this portable luminaire.**

5. Select a suitable location for your portable luminaire (E). See the installations requirements on page 1.
6. Insert the plug (G) into the mains power socket outlet and ensure it is fully plugged in.
7. Turn power on at the mains power socket outlet.
8. Use the touch switch (H) to turn the portable luminaire ON/OFF.

**NOTE: The touch switch (H) can be programmed to operate in either 3-step dimming mode or ON/OFF mode.**

**The default setting is 3-step dimming mode. See the instructions below for more information.**

### TOUCH SWITCH OPERATION (3-step dimming mode)

1. The touch switch (H) is setup to 3-step dimming mode by default. (20% → 50% → 100% → off)
  - Press the touch switch (H) once, and the luminaire will turn on and light up at 20% brightness.
  - Press the touch switch (H) a second time, and the luminaire will light up at 50% brightness.
  - Press the touch switch (H) a third time, and the luminaire will light up at 100% brightness.
  - Press the touch switch (H) a fourth time, and the luminaire will turn off.
2. When in 3-step dimming mode, it will only be compatible with the following globe/lamp types:
  - a) Incandescent globe
  - b) Halogen globe
  - c) Dimmable LED lamp

### TOUCH SWITCH OPERATION (ON/OFF mode)

**NOTE: The touch switch (H) is setup to 3-step dimming mode by default. To change the touch switch mode to ON/OFF mode, please follow the instructions: "CHANGING THE TOUCH SWITCH MODE" below.**

1. When the touch switch (H) is set to ON/OFF mode, press the touch switch (H) to turn the luminaire on or off.
2. When in ON/OFF mode, it will be compatible with the following globe/lamp types:
  - a) Incandescent globe
  - b) Halogen globe
  - c) Dimmable LED lamp
  - d) Non-dimmable LED lamp
  - e) 3-step dimmable LED lamp

### CHANGING THE TOUCH SWITCH MODE

**(3-step dimming mode → ON/OFF mode) or (ON/OFF mode → 3-step dimming mode)**

1. Press the touch switch (H) once, to turn on the globe/lamp.
2. Press and hold your finger on the touch switch (H) for approximately 25 seconds.  
Wait for the globe to flash and turn off before removing your finger from the touch switch (H).
3. After the globe/lamp has flashed and turned off, the touch switch (H) will have now changed the touch switch mode.  
If the touch switch mode has not changed, try again.


## **Operation of the USB Type-C charger (F):**

You can charge your electronic device via the USB output (F) on the base of the luminaire.

The rating of the USB output is USB-C, 5VDC/3.0A, 9VDC/2.2A, 12VDC/1.66A, Max 20W.

(Refer to the instruction manual of your electronic device for the required charging current)

**NOTE:** If the charging current of your device is over the limit of the rated current, the charger will be self-protected. In this case, your device will not charge unless you reconnect according to the rated output.

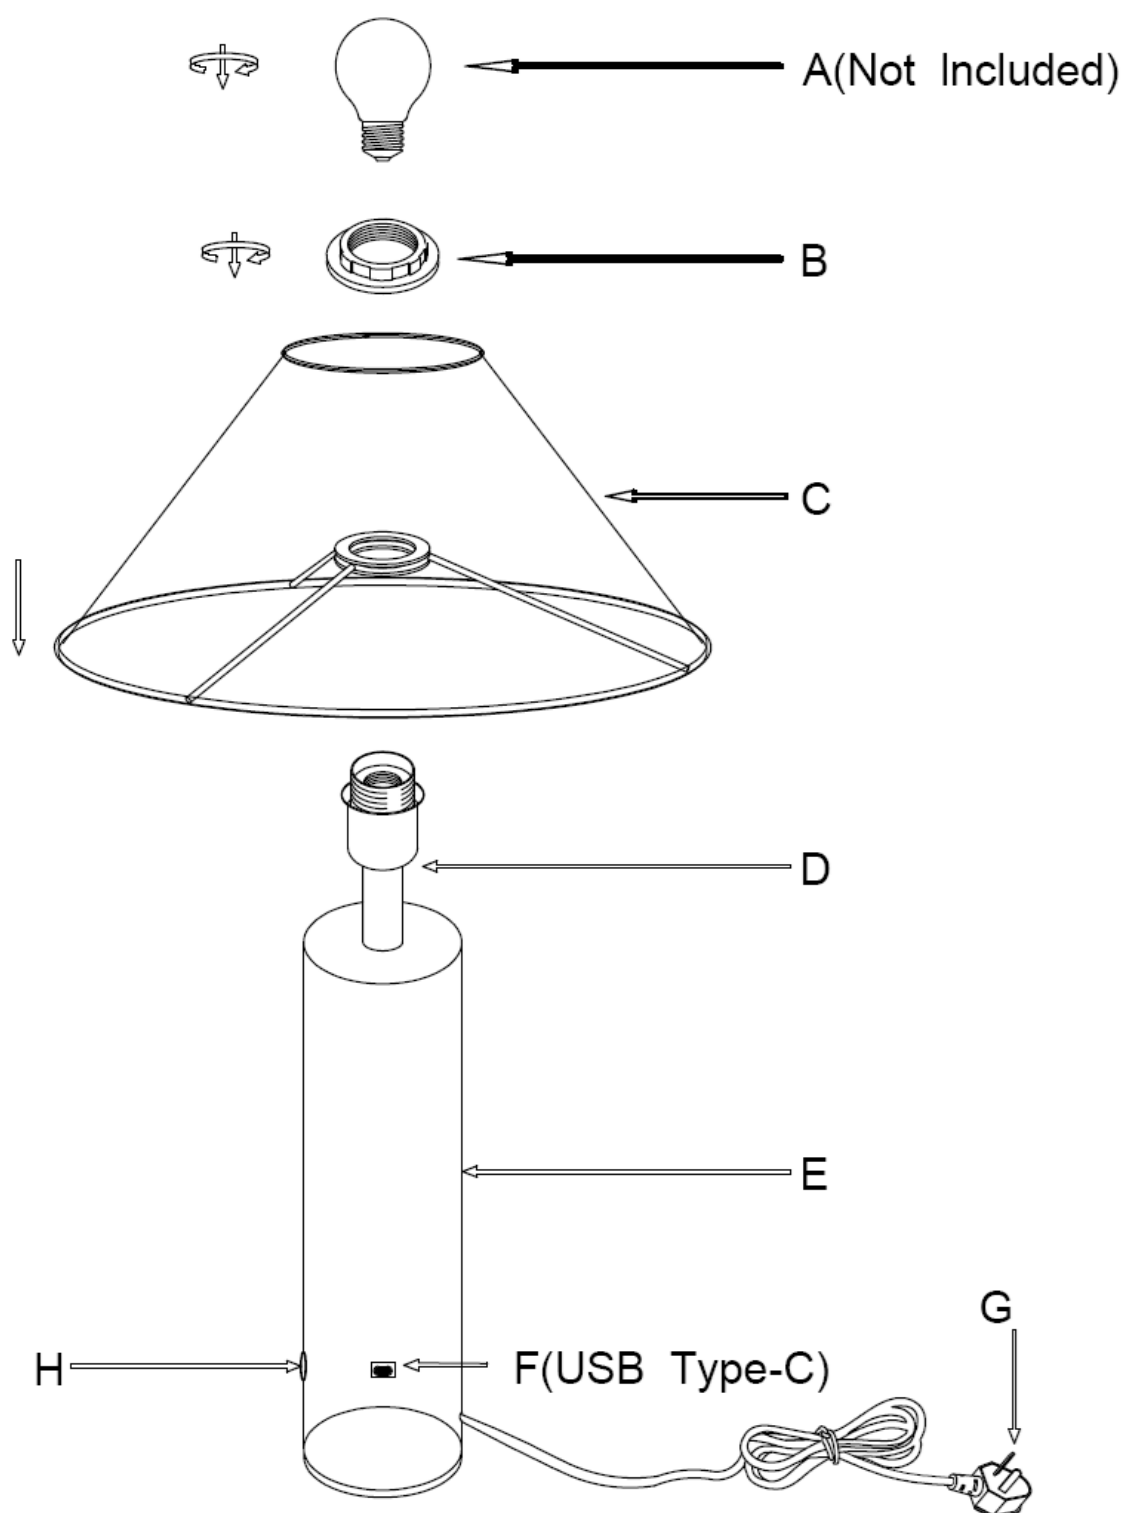

## Safety Tips

- Always ensure the power is OFF and the portable luminaire has cooled down before performing any maintenance, cleaning, changing the globe or making any adjustment to the portable luminaire.
- The external flexible cable or cord of this luminaire is damaged, it shall be replaced by the manufacturer or service agent or a similar qualified person in order to avoid a hazard.
- To avoid injury or damage to the portable luminaire, ensure that power leads and screws are secure before connecting the power.
- Young children should be supervised to ensure that they do not play with the portable luminaire.
- Handle the portable luminaire and shade with care to avoid any damage or breakage.
- Select a suitable location away from liquids and hazards.
- To clean, wipe with a soft damp cloth. Do NOT soak or immerse the product in water or other liquids.
- Ensure that the luminaire does not come in contact with corrosive chemicals/solvents or abrasive cleaners etc.

## Specifications

SKU #	280016	280017
Colour	Teak	Walnut
Rated Voltage	220-240V~ 50Hz	
Rated Wattage	Total 65W Max (Globe: 45W Max + USB Charger: 20W Max).	
USB Charger	USB Type-C 5VDC/3.0A, 9VDC/2.2A, 12VDC/1.66A, Max 20W.	
Lamp Holder	ES / E27, Max 45W	
Recommended LED Lamps	Lucci LiveWell Day Night Sleep A60: <b>SKU# 120893.</b> GE LED Candle: <b>SKU# 121484, 121488, 121492, 121494.</b> GE LED Fancy Round: <b>SKU# 121429, 121500, 121504, 121506.</b> GE LED A60: <b>SKU# 121433, 121437, 121450, 121452, 121454, 121456.</b>	
Weight	2.6kg	
Dimensions	H:560mm Dia:410mm	