

CHRYSLER PENDANT CHAIN SET

SKU# 039213, 039214, 039215

Rated Voltage 220-240V~ 50Hz

Thank you for purchasing this quality Lucci product. To ensure correct function and safety, please read and follow all instructions carefully before assembly, installation and use of this product. Please keep instructions for future reference.

Warranty

- This light fitting is covered by a 12 month warranty. The warranty is from date of purchase, not the date of installation.
- If the fitting is not assembled and installed by a licensed electrician the warranty will be void.
- Please retain proof of purchase and evidence of installation by a licensed electrician.
- Warranty will be void if there is any damage due to improper usage or modification to the fitting.
- Failure to comply with the instructions in this manual may increase the risk of damage or injury and will void warranty.

Installation requirements

- Must be assembled and installed by a licensed electrician.
- All wiring and installation of the light fitting must adhere to local and national wiring rules. eg. AS/NZS 3000:2007/Amendment 2:2012 Electrical installations.
- Do not exceed the maximum wattage rating.
- Select a suitable location for installation:
 - This product is suitable for indoor use only.
 - The mounting point must support 2 times the weight of the fitting.
 - Ensure the fitting is not installed in direct line of an air vent/system.
 - If installing a fitting in an area prone to moisture, ensure that the area is well ventilated and an appropriately rated exhaust fan is used if required. Damage or corrosion caused by moisture is not a product fault, and as such is not covered under warranty.
- Take care not to pull any electrical wires during unpacking as this may damage the connection.
- Lay out all the components on a smooth surface and make sure there are no components missing before assembling. If parts are missing, return the complete product to the place of purchase for inspection or replacement.
- Check whether the fitting has been damaged during transport. Do not operate/install any product which appears damaged in any way. Return the complete product to the place of purchase for inspection, repair or replacement.
- Ensure power to the circuit you are working on has been switched OFF before commencing any electrical work.

Installation directions

1. Remove all packaging material from the product and be careful not to throw away accessories that may be hidden within the packaging material. To help with assembly, lay the fitting on its side on a smooth non scratch surface.
2. Use the mounting bracket (B) as a template to mark the position of the holes onto the ceiling.
3. Drill holes into the ceiling and place the plastic anchors (A) into the holes. Secure the mounting bracket (B) onto the ceiling with the screws (E) provided. Ensure the screws (E) and anchors (A) used are suitable for the mounting surface and the surrounding environment.
4. Determine the suspension length required for your installation location. The chain suspension length can be adjusted by using the chain link connectors (H) and (K).

NOTE: Check and ensure that NO load/weight is placed onto the supply cord by the chain suspension.

The full load/weight of the pendant must always be on the chain suspension and NEVER on the cord.

5. Hang the fitting using the hook (F) onto the mounting bracket (B).
6. Connect the mains supply wire to the terminal block (C) provided. Ensure that the wires are secure and no bare wires are exposed.

Mains Supply Wire

Earth – Yellow/Green

Neutral – Blue or Black

Live – Brown or Red

Fitting Wire / Terminal blockYellow/Green or 


Blue or N

Brown or L

7. Push the canopy (D) up so it is flush on the ceiling and secure it by tightening the screw on the side (G).
8. Install the globe (O - not included) into the lamp holder (K).
9. Install the outer glass shade (P – not included) by tightening the 3 nuts (M).

NOTE: This fitting is only compatible with the following shades (sold separately): SKU# 039217, 039218, 039219, 039220, 039221, 039222, 039223, 039224, 039225, 039226, 039227, 039228, 039229, 039230, 039231, 039232.

10. After the full assembly and installation, switch on the fitting to test and enjoy your new lighting product.

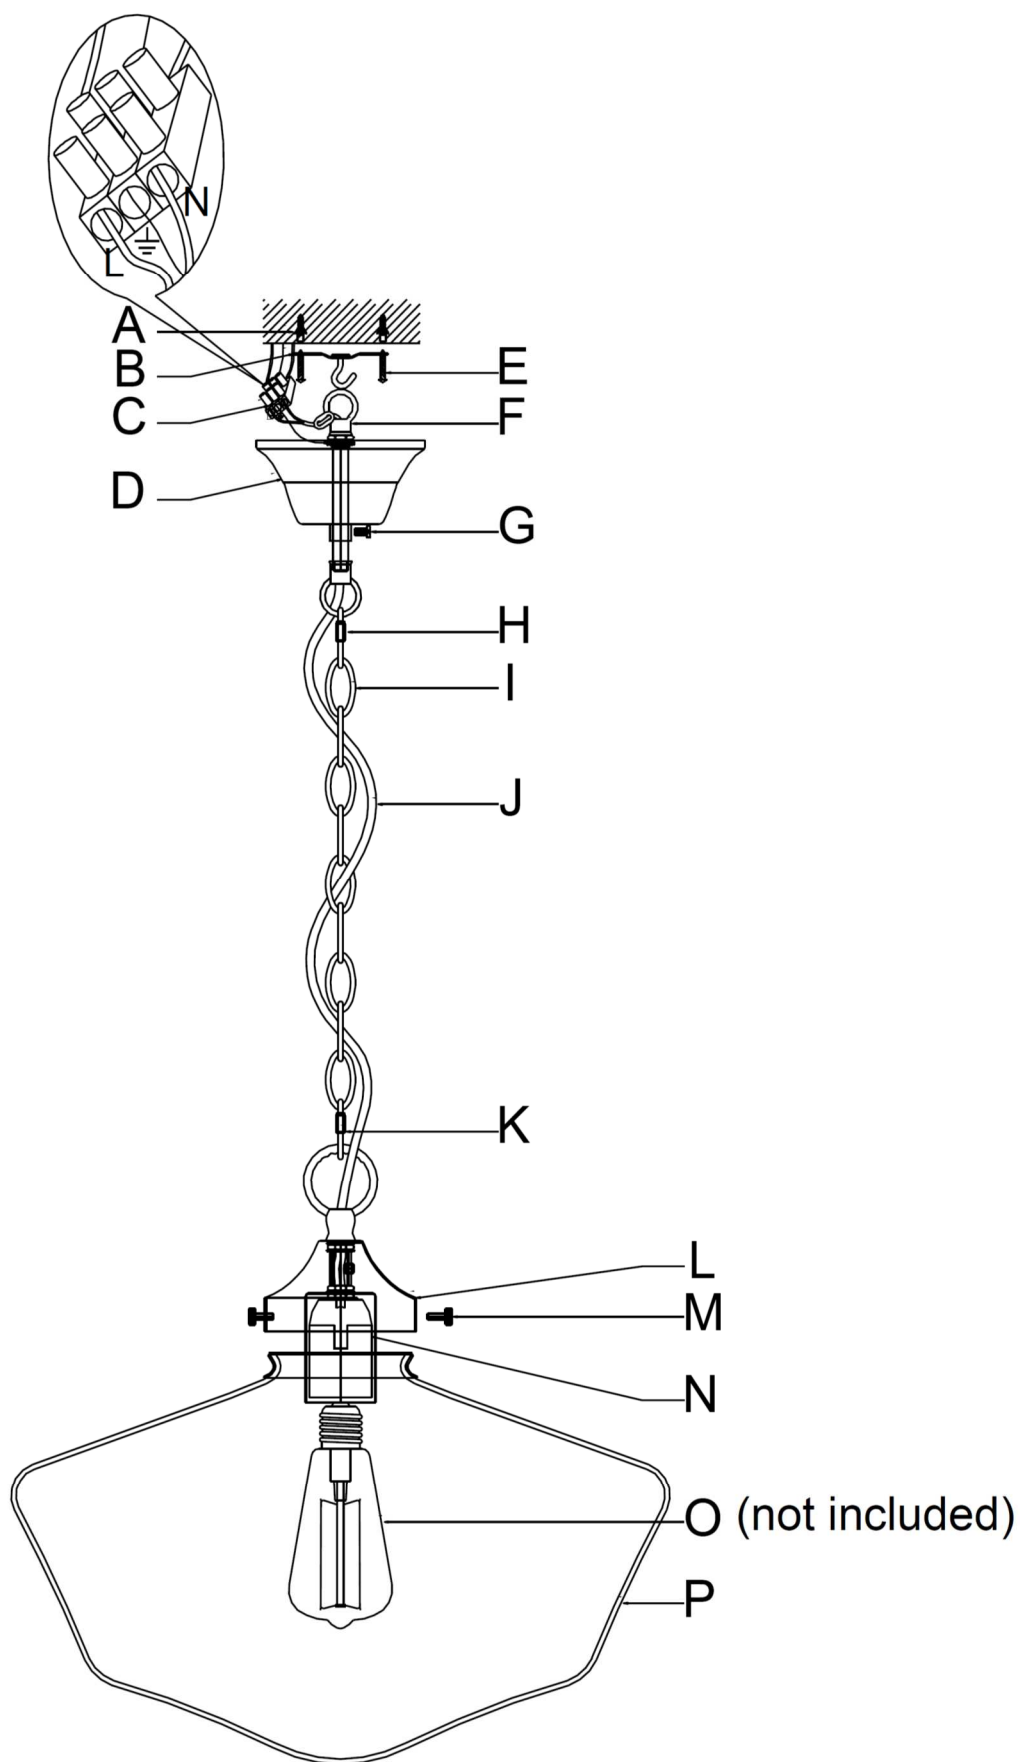

NOTE: This fitting is only compatible with the shades (sold separately) listed in the specification section.

Safety tips

- Always ensure the power is OFF and the fitting has cooled down before performing any maintenance, cleaning, changing the globe or making any adjustment to the fitting.
- To avoid injury or damage to the fitting, ensure that power leads and screws are secure before connecting the power.
- Select a suitable location away from liquids and hazards.
- Ensure that the fitting does not come in contact with corrosive chemicals/solvents or abrasive cleaners etc.
- To clean, wipe with a damp clean cloth. Do NOT soak or immerse the product in water or other liquids.

Specifications

| SKU # | 039213 | 039214 | 039215 |
|--|--|---------------|-------------|
| Colour | Antique Nickel | Antique Brass | Matte Black |
| Rated Voltage | 220-240V~ 50Hz | | |
| Rated Wattage | 45W Max. | | |
| Lamp Holder | ES / E27 | | |
| Weight | 0.7kg (without shade) 3.5kg (Max. weight with shade) | | |
| Compatible Shades (sold separately) | SKU# 039217, 039218, 039219, 039220, 039221, 039222, 039223, 039224, 039225, 039226, 039227, 039228, 039229, 039230, 039231, 039232 | | |
| Dimensions | H:160mm Dia:120mm (without shade) Suspension:2000mm | | |