

### SENTINEL UP/DOWN WALL BRACKET

SKU# 230309, 230316, 230318, 239452

Rated Voltage 220-240V~ 50Hz

Thank you for purchasing this quality Lucci product. To ensure correct function and safety, please read and follow all instructions carefully before assembly, installation and use of this luminaire. Please keep instructions for future reference.

## Warranty

- This luminaire is covered by a 12-month warranty. The warranty is from date of purchase, not the date of installation.
- If the luminaire is not assembled and installed by a licensed electrician, the warranty will be void.
- Please retain the proof of purchase and evidence of installation by a licensed electrician for any warranty enquiries.
- Warranty will be void if there is any damage due to improper usage or modification to the luminaire.
- Failure to comply with the instructions in this manual may increase the risk of damage or injury and will void the warrantv.

# Installation Requirements

- This luminaire must be assembled and installed by a licensed electrician.
- All wiring and installation of the luminaire must adhere to the latest local and national wiring rules. E.g. AS/NZS 3000 Electrical Installations.
- The luminaire is a Class I product and must be earthed during wiring and installation.
- This luminaire is rated IP44 and must be maintained during wiring and installation of the luminaire
- Do not exceed the maximum wattage rating.
- The luminaire must not be used if the protective shield or shade has been cracked or damaged. Replace the protective shield or shade before using the luminaire.
- Select a suitable location for installation:
  - The mounting point must be able to support 2 times the weight of the luminaire.
  - This luminaire is rated against water penetration to IP44 standards, which is water splashing from any direction.
- Take care not to pull any electrical wires during unpacking as this may damage the connection.
- Lay out all the components on a smooth surface and make sure no components are missing before assembling. If parts are missing, return the complete product to the place of purchase for inspection or replacement.
- Check whether the luminaire has been damaged during transport. Do not operate/install any product which appears damaged in any way. Return the complete product to the place of purchase for inspection, repair or replacement.
- Ensure power to the circuit you are working on has been switched OFF before commencing any electrical work.

#### **Installation Directions**

1 | Page

- 1. Remove all packaging material from the product and be careful not to throw away accessories that may be hidden within the packaging material. If assembly is required, place the luminaire on a smooth non-scratch surface. (Fig. 1)
- 2. Remove the mounting bracket from the luminaire by loosening the nuts on the front of the luminaire. (Fig. 2)
- 3. Use the mounting bracket as a template to mark the screw positions on the wall. (Fig. 3)
- 4. Install the mounting bracket on the wall by using appropriately sized mounting screws and anchors. Ensure the mounting screws and anchors used are suitable for the mounting surface and the surrounding environment. (Fig. 4)

NOTE: A non-corrosive bead of silicon MUST be applied before installation onto the wall ensuring that no water can run down into the cabling.

5. Connect the mains supply wire to the terminal block. Ensure the wires are secure and no bare wires are exposed.

**Mains Supply Wire** Earth – Yellow/Green (+)

Yellow/Green or (♣)

**Luminaire Wire / Terminal label** 

Neutral – Blue or Black


Blue or N Brown or L

Live - Brown or Red

v1.3 (08/2021)



- 6. Attach the terminal block back onto the mounting bracket. (Fig. 5)
- 7. Take note of the directional label and install the luminaire onto the mounting bracket and secure by tightening the nuts at the front of the luminaire. (Fig. 5)
- 8. Remove the covers/shades from the luminaire. (Fig. 6)
- 9. Install globes (not included) into the lamp holders. Do not exceed the maximum wattage rating. (Fig. 7)
- 10. Install the covers/shades back onto the luminaire and check that all parts are done up tightly. (Fig. 8)
- 11. After the installation, switch on the luminaire to test and enjoy your new lighting product.

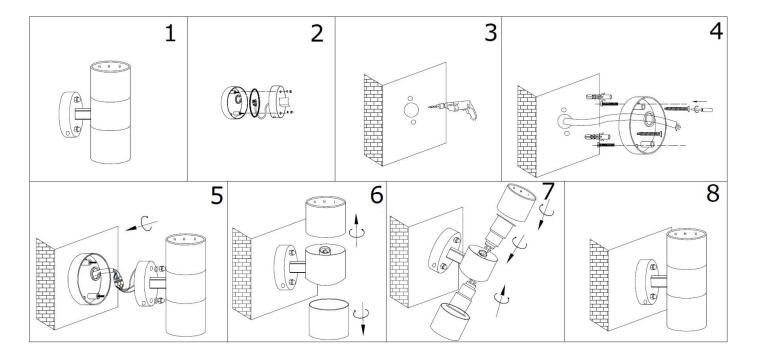

## Safety Tips

- Always ensure the power is OFF and the luminaire has cooled down before performing any maintenance, cleaning, changing the globe or making any adjustment to the luminaire.
- The luminaire must not be used if the protective shield or shade has been cracked or damaged. Replace the protective shield or shade before using the luminaire.
- To avoid injury or damage to the luminaire, ensure that power leads and screws are secure before connecting the power.
- To clean, wipe with a soft damp cloth. Do NOT soak or immerse the luminaire in water or other liquids.
- Ensure that the luminaire does not come in contact with corrosive chemicals/solvents or abrasive cleaners etc.

Specifications				
SKU#	230309	230316	230318	239452
Material/Finish	316 Stainless Steel	304 Stainless Steel	Matte Black	White
Rated Voltage	220-240V~ 50Hz			
Rated Wattage	70W (2x MAX 35W globe)			
Lamp Holder	GU10			
IP Rating	IP44			
Weight	0.7kg		0.5kg	
Dimensions	H:186mm W:7	8mm E:110mm	H:186mm W	/:93mm E:110mm

2 | Page v1.3 (08/2021)